Quick guide

How to install it in just 1 minute

Connect one end of the handset's coiled cord to the slot on the bottom of the handset (**3**), and the other end of the cord into the slot on the left-hand side of the cradle (**4**).

Connect one end of the flat line cord to the slot in the cradle (**12**), and the other end into the telephone wall socket in your home.

Basic telephone use

Making a call

- Pick up the handset.
- Listen to the dialling tone and dial the telephone number.
- When you have finished, put the handset back onto its cradle.

Receiving a call

- The ringer rings when there is an incoming call.
- Pick up the handset.
- Proceed to take the phone call.
- When you have finished, put the handset back onto its cradle.

Redial last number dialled (9)

- Pick up the handset.
- Press the key.
- When you have finished, put the handset back onto its cradle.

And if you have a couple more minutes

Controls

1. Receiver

2. Microphone

3. Coiled cord slot on the handset

4. Coiled cord slot on the cradle

5. Numeric keypad

6. Key : Mute

7. Key : Access to additional services from your telephone network provider

8. Key : Pause

9. Key : Redial last number dialled

10. Handset fixing flanges for wall installation

11. Hook

12. Line cord slot

13. Ring volume switch: or

14. Switch for key: 100 ms or 300 ms

15. Ringer output

16. Slots for screws for wall assembly

Index

1. Features 15

2. Cautions 15

3. Maintenance 16

4. Installation 16

4.1. Contents 16
4.2. Installation 16
4.3. Wall assembly 16

5. Device settings 17

5.1. Ringer volume adjustment (13) 17
5.2. Flash key adjustment (14) 17

6. Operation 18

6.1. Making a call 18
6.2. Receiving a call 18
6.3. Mute (6) 18
6.4. Flash key (7) 18
6.5. Pause key (8) 18
6.6. Redial key (9) 19

1 Features

- Tone dialling.
- Ringer volume adjustment: high and low.
- Redial.
- Mute: mute microphone.
- R / F key: to access supplementary services.
- Flash time: 100 ms or 300 ms
- Pause key.
- Table top operation or wall mounting.
- EC certificate

2 Safety instructions

Attention

- Read these instructions before using the telephone.
- Do not expose the telephone to water or humidity.
- Whenever possible, avoid installing the telephone in extremely cold or hot places and next to television sets, radios or other electrical appliances.

Intended use

The telephone is suitable for telephoning within a public telephone network system. Any other use is considered unintended use.
Unauthorised modification or reconstruction is not permitted. Under no circumstances open the device or complete any repair work yourself.

Disposal

In order to dispose of your device, take it to a collection point provided by your local public waste authorities (e.g. recycling centre). According to laws on the disposal of electronic and electrical devices, owners are obliged to dispose of old electronic and electrical devices in a separate waste container.

The adjacent symbol indicates that the device must not be disposed of in normal domestic waste!

Packaging materials must be disposed of according to local regulations.

3 Maintenance

1. Clean the housing surfaces with a soft, fluff-free cloth.
2. Do not use any cleaning agents or solvents.

4 Installation

4.1 Contents

- A telephone
- A coiled cord for the handset
- A line cord
- User manual

4.2 Installation

This telephone must be connected to telephone lines, which accepts tone (Dtmf) dialling.

1. Connect one end of the handset's coiled cord to the slot on the bottom of the handset (**3**), and the other end of the cord into the slot on the left-hand side of the cradle (**4**).
2. Connect one end of the flat line cord to the slot on the cradle (**12**), and the other end in the telephone wall socket in your home. Thread the flat cord through the guide that is designed for this purpose on the bottom of the telephone's cradle.

4.3 Wall assembly

This device is can be easily wall-mounted. To do so:

- Drill two holes in the wall, 75 mm apart, as indicated in the drawing below for wall assembly.
- Put the screws in. Use the following type of screws: 3.5 x 25KA, d=7mm.
- Fit the cradle into the slots (**16**) located on the bottom of the telephone for this purpose and make sure that it is securely fixed to the wall.

Illustration for wall assembly:

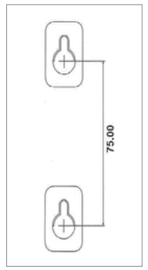

- Remember that the telephone has two handset holder clips (**10**). One for when the telephone is on the hook and the other for when it is off the hook.

5 Device settings

On the bottom of the telephone there are several switches which will help you to set several fundamental functions:

5.1 Ringer volume adjustment (13)

Turn the (**13**) switch to the position for high volume and to the position for low volume. The default factory volume setting is high: .

5.2 Flash key adjustment (14)

This key allows you to access to the different services, which offers its operator or PABX, such as, “call forward”, “call waiting”, “answering machine”, etc. For further information contact your telephone network provider.
In delivery state, a flash time of 100 ms is set. When connected to a public telephone network in most cases no switching is necessary.
If your telephone is connected to a PBX, it can be necessary to set the flash time to 300 ms. Please refer to the documentation of your PBX.

6 Operation

6.1 Making a call

- Pick up the handset.
- Listen to the dialling tone and dial the telephone number.
- When you have finished, put the handset back onto its cradle.

6.2 Receiving a call

- The ringer rings when it receives a call.
- Pick up the handset.
- Proceed to take the phone call.
- When you have finished, put the handset back onto its cradle.

6.3 Mute (6)

Mute the microphone. Press and hold down this key , if you DO NOT want to be heard by the person on the other end of the line and release when you are ready for them to hear you again.

6.4 Flash key (7)

This key lets you access the different additional services offered by your telephone network provider or PBX, such as: “call forwarding, call on hold”, answering machine service, etc. For further information please contact your telephone network provider.
If your telephone is connected to a PBX, it can be necessary to set the flash time to 300 ms. Please refer to the documentation of your PBX.

6.5 Pause key (8)

When your are dialling digits you can enter a pause of approx. 3 seconds by pressing this key. This function is useful, for example, when you are going to make a call from a PBX, and after dialling the access code to the line you have to wait for a second tone.

6.6 Redial key (9)

If you want to redial the last number dialled:

- Pick up the handset.
- Press the key and the telephone will automatically dial the last dialled number again.
- When you have finished, put the handset back onto its cradle.

Troubleshooting

• You hear nothing when you take the phone off the hook

- Check the connections to the telephone line (**12**) and the wall socket in your home.
- Check the receiver's coiled cord connections (**3** and **4**).
- Check the installation and connect the handset directly to its PTR. If the problem persists, contact your telephone company.

• The telephone does not dial the number

- Check that with each digit you hear a keystroke tone in the receiver.

• The ringer is very low

- Check that the ringer volume switch is in the position (High volume).

Supplementary services

Your telephone supports supplementary services provided by your telephone network provider, such as brokering, call waiting and conference facilities. These supplementary services can be used via the R/F-button.
Please contact your telephone network provider regarding which Flash time must be set to use the supplementary services. Contact your telephone network provider with regard to enabling supplementary services.

Declaration of Conformity

This device fulfils the requirements stipulated in the EU directive:

- 1999/5/EU directive on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity.

Conformity with the above mentioned directive is confirmed by the CE symbol on the device. To view the complete Declaration of Conformity, please refer to the free download available on our web site

www.audioline.de

Guarantee

AUDIOLINE equipment is produced and tested according to the latest production methods. The implementation of carefully chosen materials and highly developed technologies ensure trouble-free functioning and a long service life. The terms of guarantee do not apply where the cause of equipment malfunction is the fault of the telephone network operator or any interposed private branch extension system. The terms of guarantee do not apply to the batteries or power packs used in the products. The period of guarantee is 24 months from the date of purchase.
All deficiencies related to material or manufacturing errors within the period of guarantee will be redressed free of charge. Rights to claims under the terms of guarantee are annulled following tampering by the purchaser or third parties. Damage caused as the result of improper handling or operation, normal wear and tear, incorrect positioning or storage, improper connection or installation or Acts of God and other external influences are excluded from the terms of guarantee. In the case of complaints, we reserve the right to repair defect parts, replace them or replace the entire device. Replaced parts or devices become our property. Rights to compensation in the case of damage are excluded where there is no evidence of intent or gross negligence by the manufacturer.
If your device shows signs of defect during the period of guarantee, please return it to the sales outlet in which you purchased the AUDIOLINE device together with the purchase receipt. All claims under the terms of guarantee in accordance with this agreement can only be asserted at the sales outlet.
No claims under the terms of guarantee can be asserted after a period of two years from the date of purchase and hand-over of the product.

Service Hotline Germany: 0180 5 001388
(Costs for call from german landline at time of print: 14 ct/min, max. 42 ct/min from mobile phone providers.)

AUDIOLINE GmbH • Neuss
Internet: www.audioline.de • E-Mail: info@audioline.de
Version 1.0 • 22.12.2011

Übersicht

Kurzanleitung 2
Inbetriebnahme
Bedienung

Bedienungsanleitung 3
Bedienelemente

Inhaltsverzeichnis 4
Ausführliche Bedienungsanleitung 5
Fehlersuche 10
Zusatzdienste 10
Konformitätserklärung 10

Garantie 11

Manual structure

Quick guide 12
How to install it in just 1 minute
Basic telephone use

And if you have a couple more minutes 13
Controls

Index 14
Full instructions guide 15
Troubleshooting 20
Additional services 20
Declaration of Conformity 20

Guarantee 21